


Nº	CODE	DESCRIPTION
1	BCL2301	CASE COVER ASSY
1B	BCL2301B	RIM PINION COVER ASSY
2	BCL2302	DRIVING GEAR ASSY
3	BCL2303	CONICAL RIM ASSY
4	BCL2304	BLADE ASSY
5	BCL2305	COUNTER BLADE
6	BCL2306	HALL PCB ASSY
7	BCL2307	ENGINE ASSY
8	BCL2308	GEAR BOX ASSY
9	BCL2309	TRIGGER ASSY
10	BCL2310	SMALL BEVEL ASSY
11	BCL2311	BIG SPIRAL BEVEL ASSY
12	BCL2312	MAIN BODY
13	BCL2313	CENTER BOLT ASSY
14	BCL2314	ENGINE PCB
15	BCL2C1	CHARGER + EU CORD C7
15B	BBBCAB-EU	EU POWER CORD C7
15C	BBBCAB-UK	UK POWER CORD C7
15D	BBBCAB-US	US POWER CORD C7
15E	BBBCAB-AUZ	AUZ POWER CORD C7
16	BCL2316	CONTROL BOX
17	BCL2317	BATTERY HOLSTER
18	BCL2318	CABLE
19	BCL2B1	BATTERY ASSY

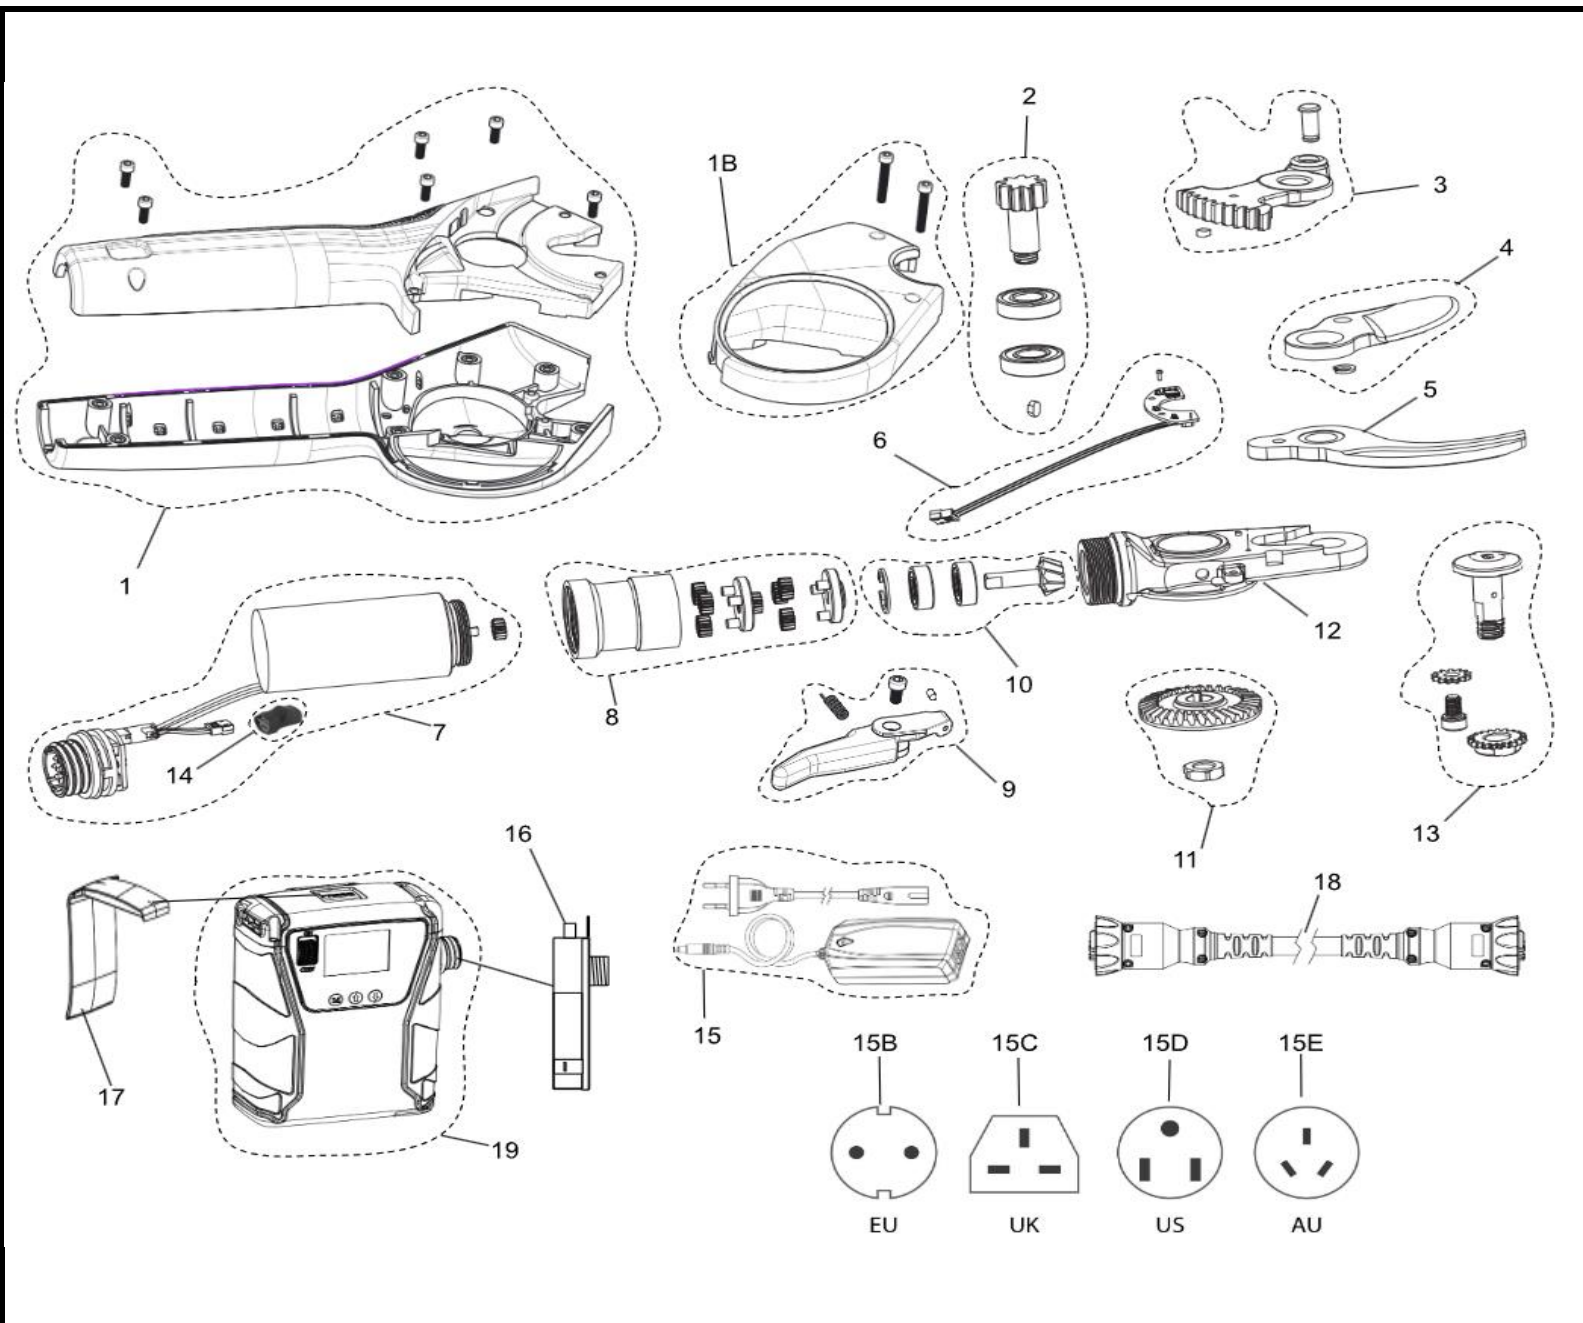

BCL23

Revision: 03

SNA Europe does not cover the causes over negligence in tool use and/or repair, inadequate care, or abnormal usage conditions. Follow the instructions for proper use, safety, maintenance and servicing given by SNA Europe

26092023