



N°	Part Code	Description
1	BH720-01	RAM ASSY
2	BH720-02	OIL HOSE
3	BH720-03	HOSE BASE ASSY
5	BH720-05	FOOT PUMP ASSY
8	BH720-08	HANDLE
11	BH720-11	FOOT BASE
12	BH720-12	TOOL TRAY
13	BH720-13	ROLLER ASSY(LEFT)
14	BH720-14	ROLLER ASSY(RIGHT)
15	BH720-15	ROLLER ASSY(DOWN)
16	BH720-16	PIN
17	BH720-17	HAND WINCH
18	BH720-18	V-BLOCK
19	BH720-19	SCREW ASSY FOR RAM PLATE
20	BH720-20	GAUGE
21	BH720-21	CABLE
22	BH720-22	PRESS PINS
23	BH720-23	PUNCHER Ø10
24	BH720-24	PUNCHER Ø12
25	BH720-25	PUNCHER Ø16
26	BH720-26	PUNCHER Ø18
27	BH720-27	PUNCHER Ø20
28	BH720-28	PUNCHER Ø22
29	BH720-29	PUNCHER Ø25
30	BH720-30	PUNCHER Ø30
31	BH720-31	ADAPTOR

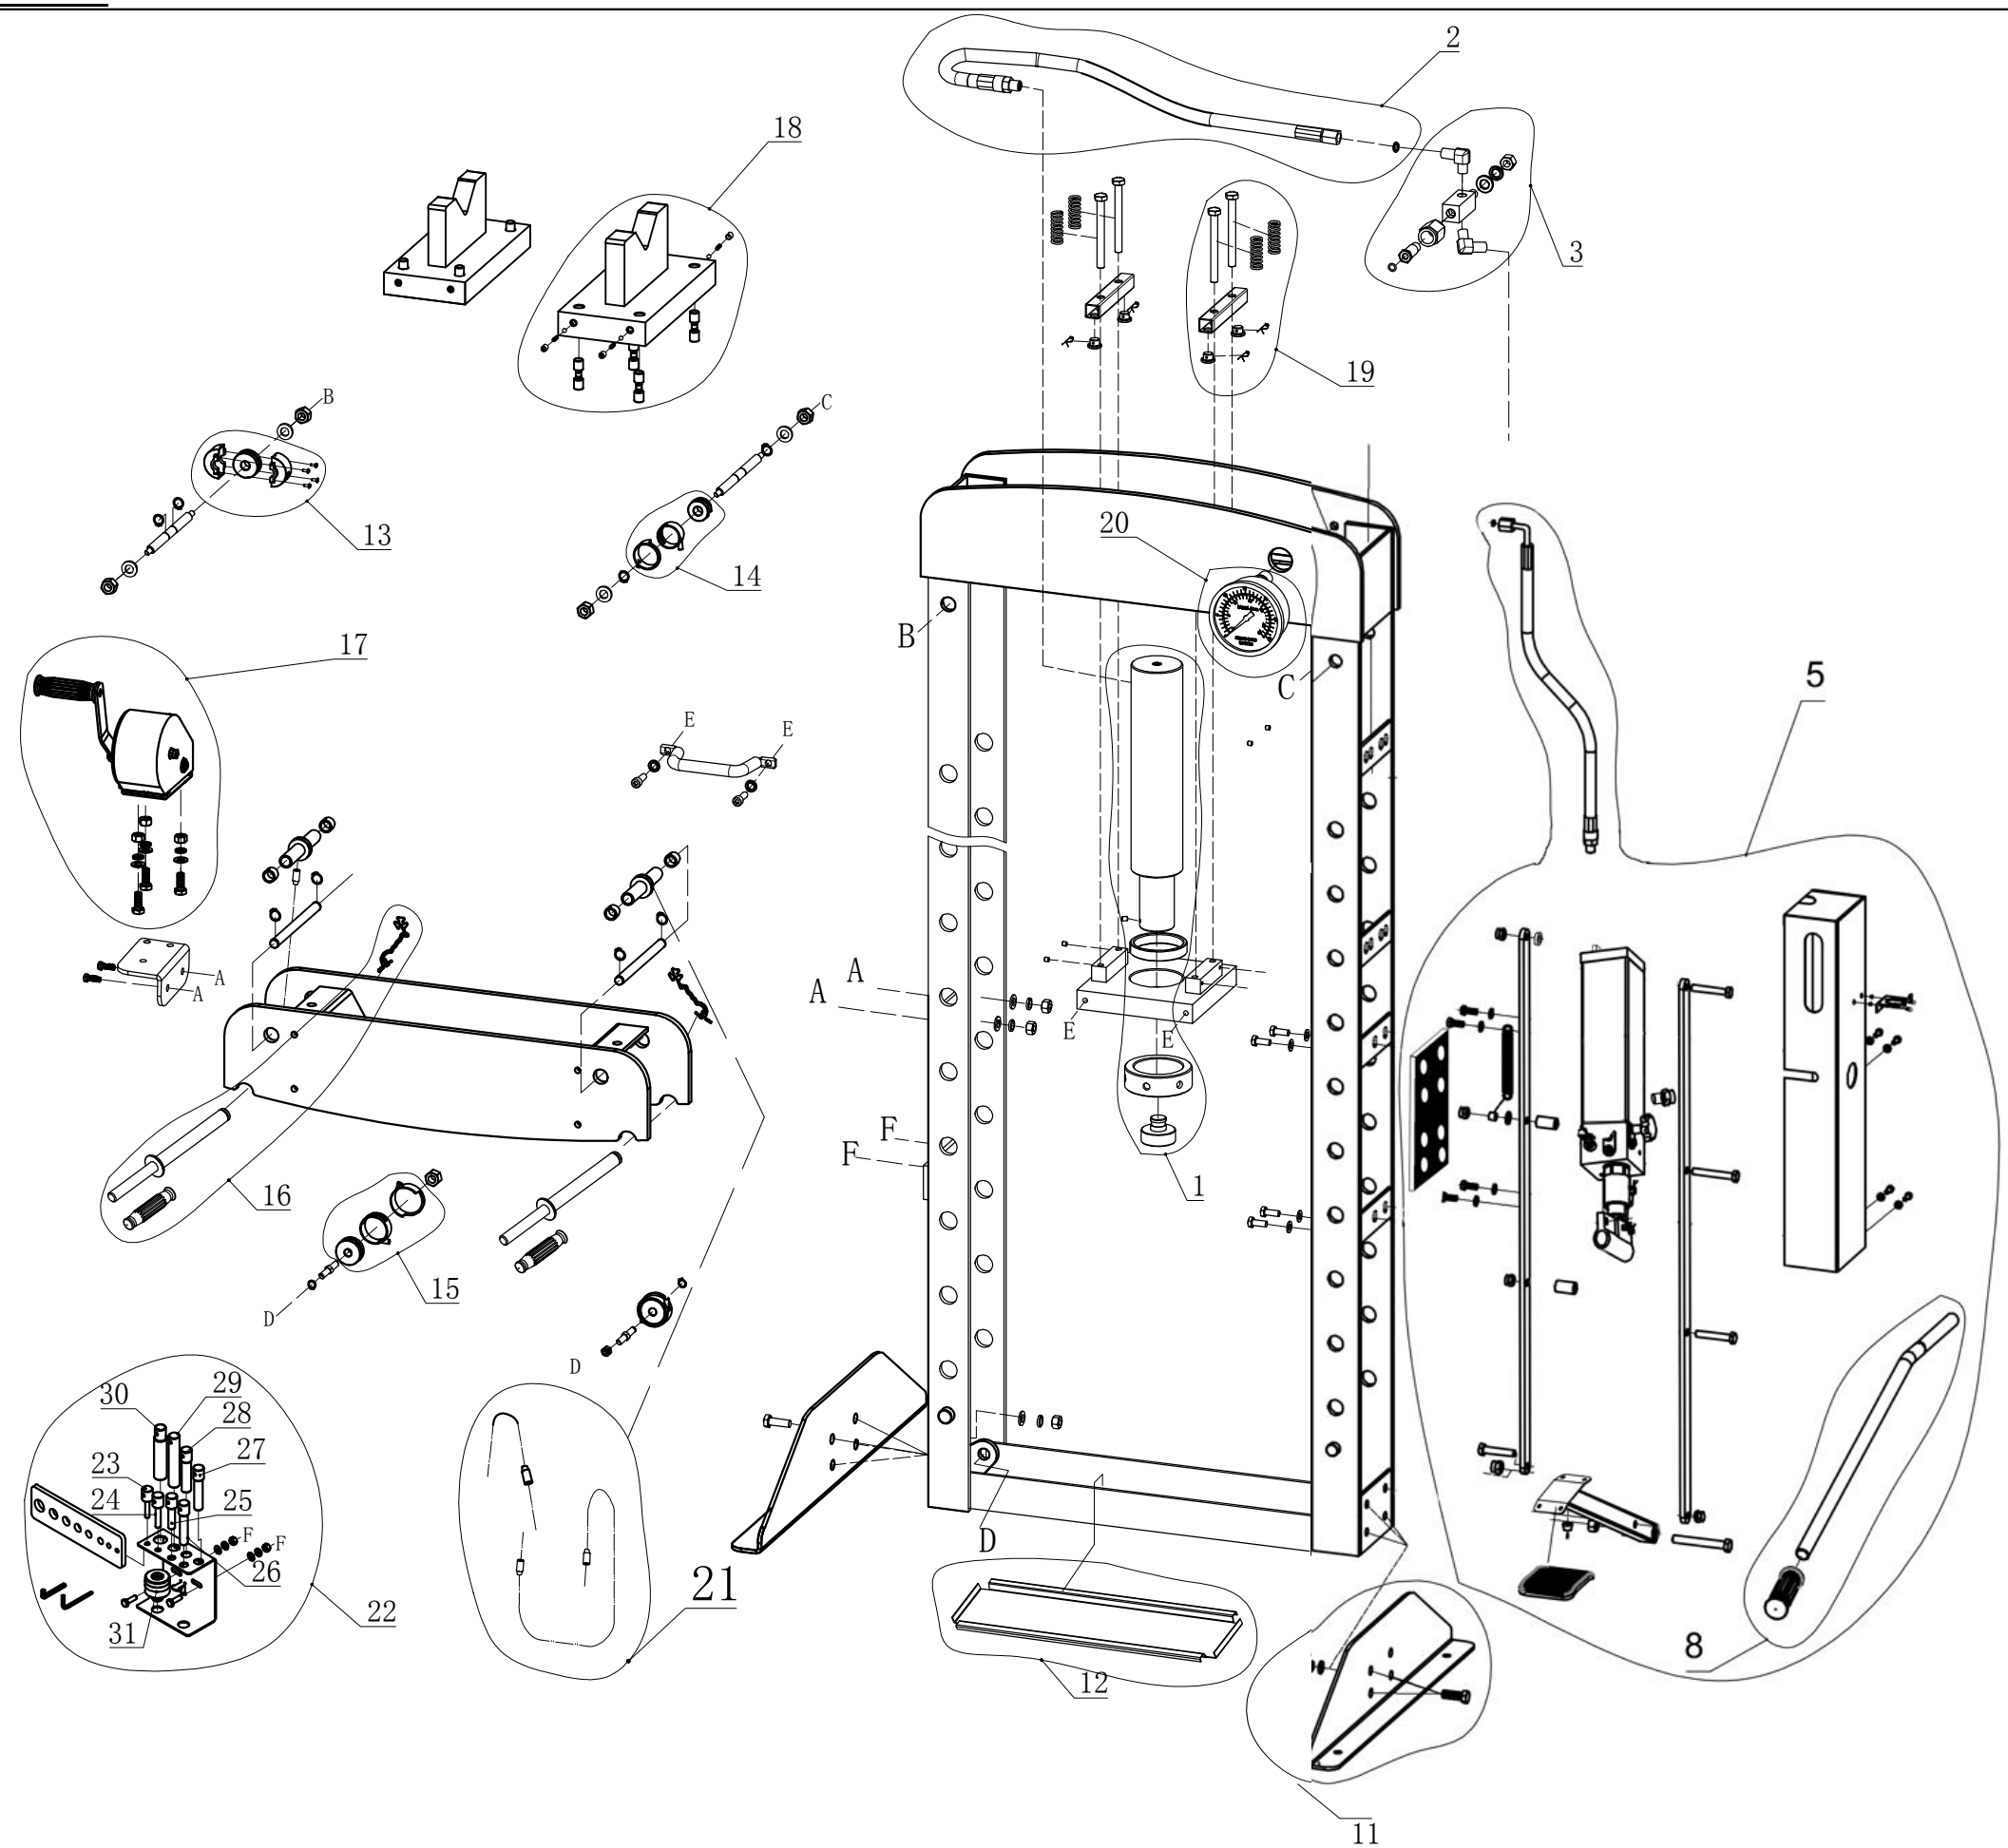

BH720

SNA Europe does not cover the causes over negligence in tool use and/or repair, inadequate care, or abnormal usage conditions. Follow the instructions for proper use, safety, maintenance and servicing given by SNA Europe.


N°	Part Code	Description
1	BH730-01	RAM ASSY
2	BH730-02	OIL HOSE
3	BH730-03	HOSE BASE ASSY
5	BH730-05	FOOT PUMP ASSY
8	BH720-08	HANDLE
11	BH730-11	FOOT BASE
12	BH730-12	TOOL TRAY
13	BH720-13	ROLLER ASSY(LEFT)
14	BH720-14	ROLLER ASSY(RIGHT)
15	BH720-15	ROLLER ASSY(DOWN)
16	BH730-16	PIN
17	BH720-17	HAND WINCH
18	BH730-18	V-BLOCK
19	BH730-19	SCREW ASSY FOR RAM PLATE
20	BH730-20	GAUGE
21	BH730-21	CABLE
22	BH720-22	PRESS PINS
23	BH720-23	PUNCHER Ø10
24	BH720-24	PUNCHER Ø12
25	BH720-25	PUNCHER Ø16
26	BH720-26	PUNCHER Ø18
27	BH720-27	PUNCHER Ø20
28	BH720-28	PUNCHER Ø22
29	BH720-29	PUNCHER Ø25
30	BH720-30	PUNCHER Ø30
31	BH730-31	ADAPTOR

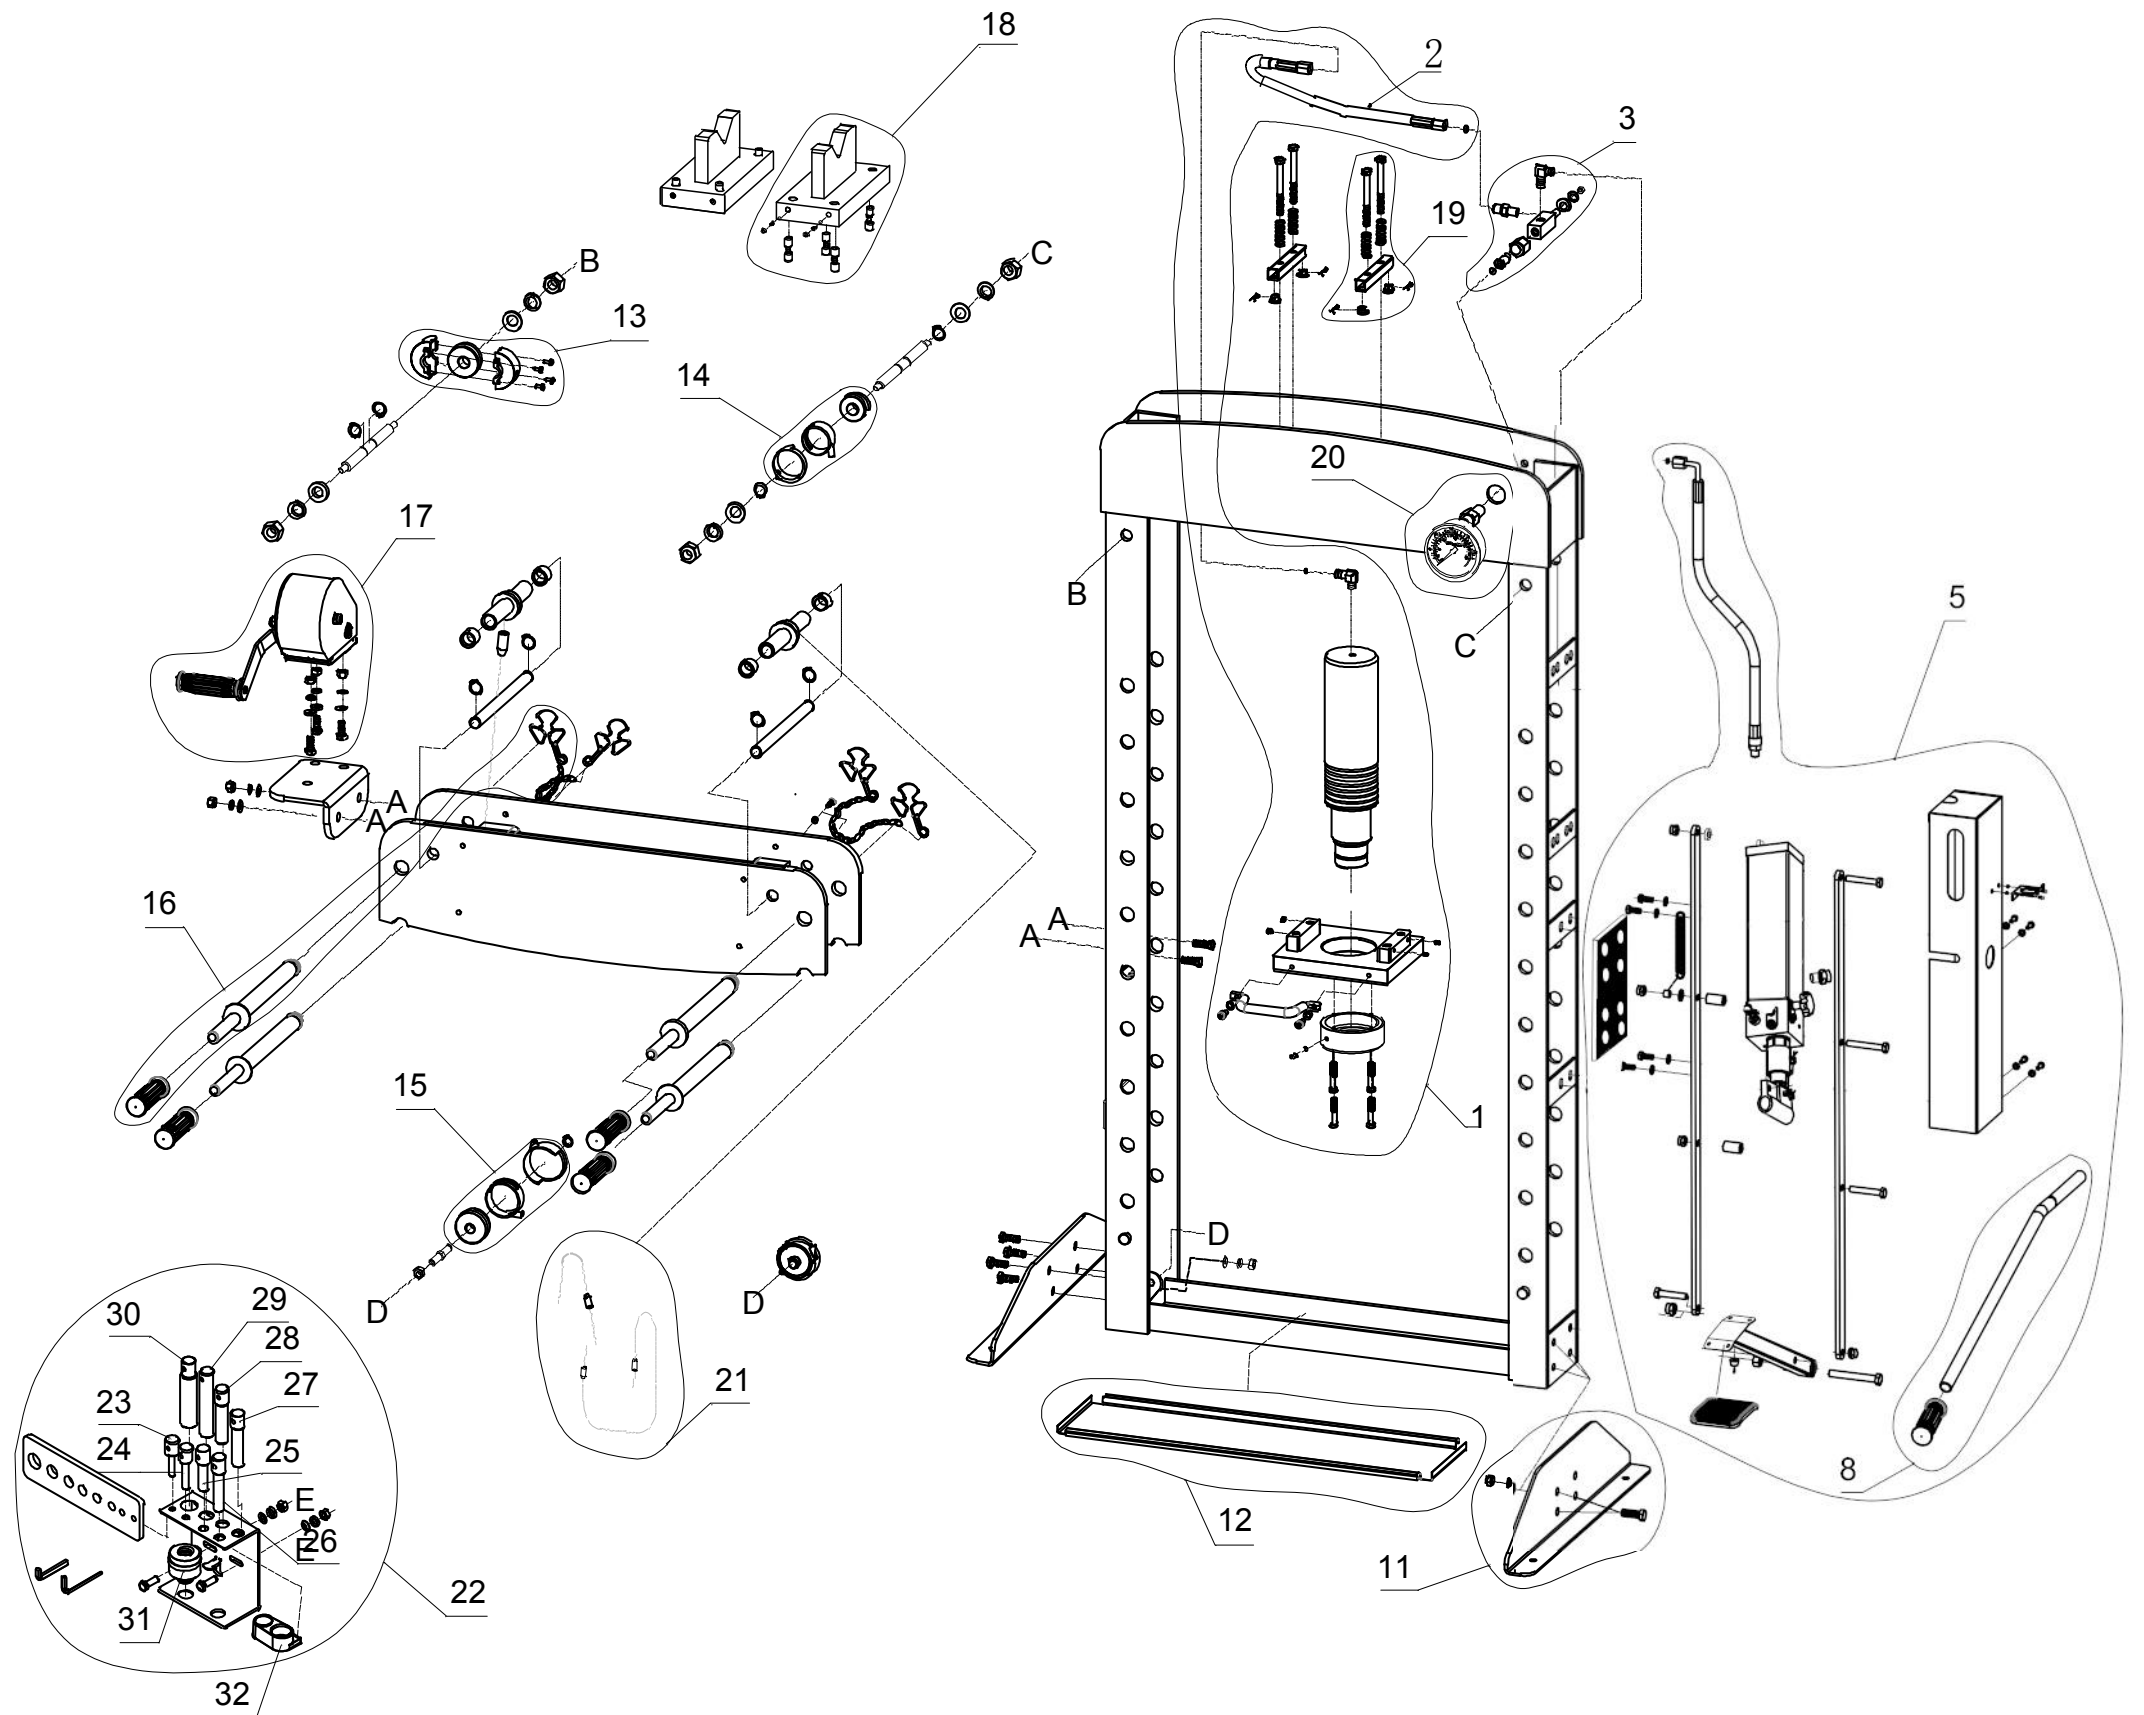

BH730

SNA Europe does not cover the causes over negligence in tool use and/or repair, inadequate care, or abnormal usage conditions. Follow the instructions for proper use, safety, maintenance and servicing given by SNA Europe.

N°	Part Code	Description
1	BH750-01	RAM ASSY
2	BH750-02	OIL HOSE
3	BH750-03	HOSE BASE ASSY
5	BH750-05	FOOT PUMP ASSY
8	BH720-08	HANDLE
11	BH750-11	FOOT BASE
12	BH750-12	TOOL TRAY
13	BH720-13	ROLLER ASSY(LEFT)
14	BH720-14	ROLLER ASSY(RIGHT)
15	BH720-15	ROLLER ASSY(DOWN)
16	BH750-16	PIN
17	BH720-17	HAND WINCH
18	BH750-18	V-BLOCK
19	BH750-19	SCREW ASSY FOR RAM PLATE
20	BH750-20	GAUGE
21	BH750-21	CABLE
22	BH720-22	PRESS PINS
23	BH720-23	PUNCHER Ø10
24	BH720-24	PUNCHER Ø12
25	BH720-25	PUNCHER Ø16
26	BH720-26	PUNCHER Ø18
27	BH720-27	PUNCHER Ø20
28	BH720-28	PUNCHER Ø22
29	BH720-29	PUNCHER Ø25
30	BH720-30	PUNCHER Ø30
31	BH720-31	ADAPTOR
32	BH750-32	OIL HOSE

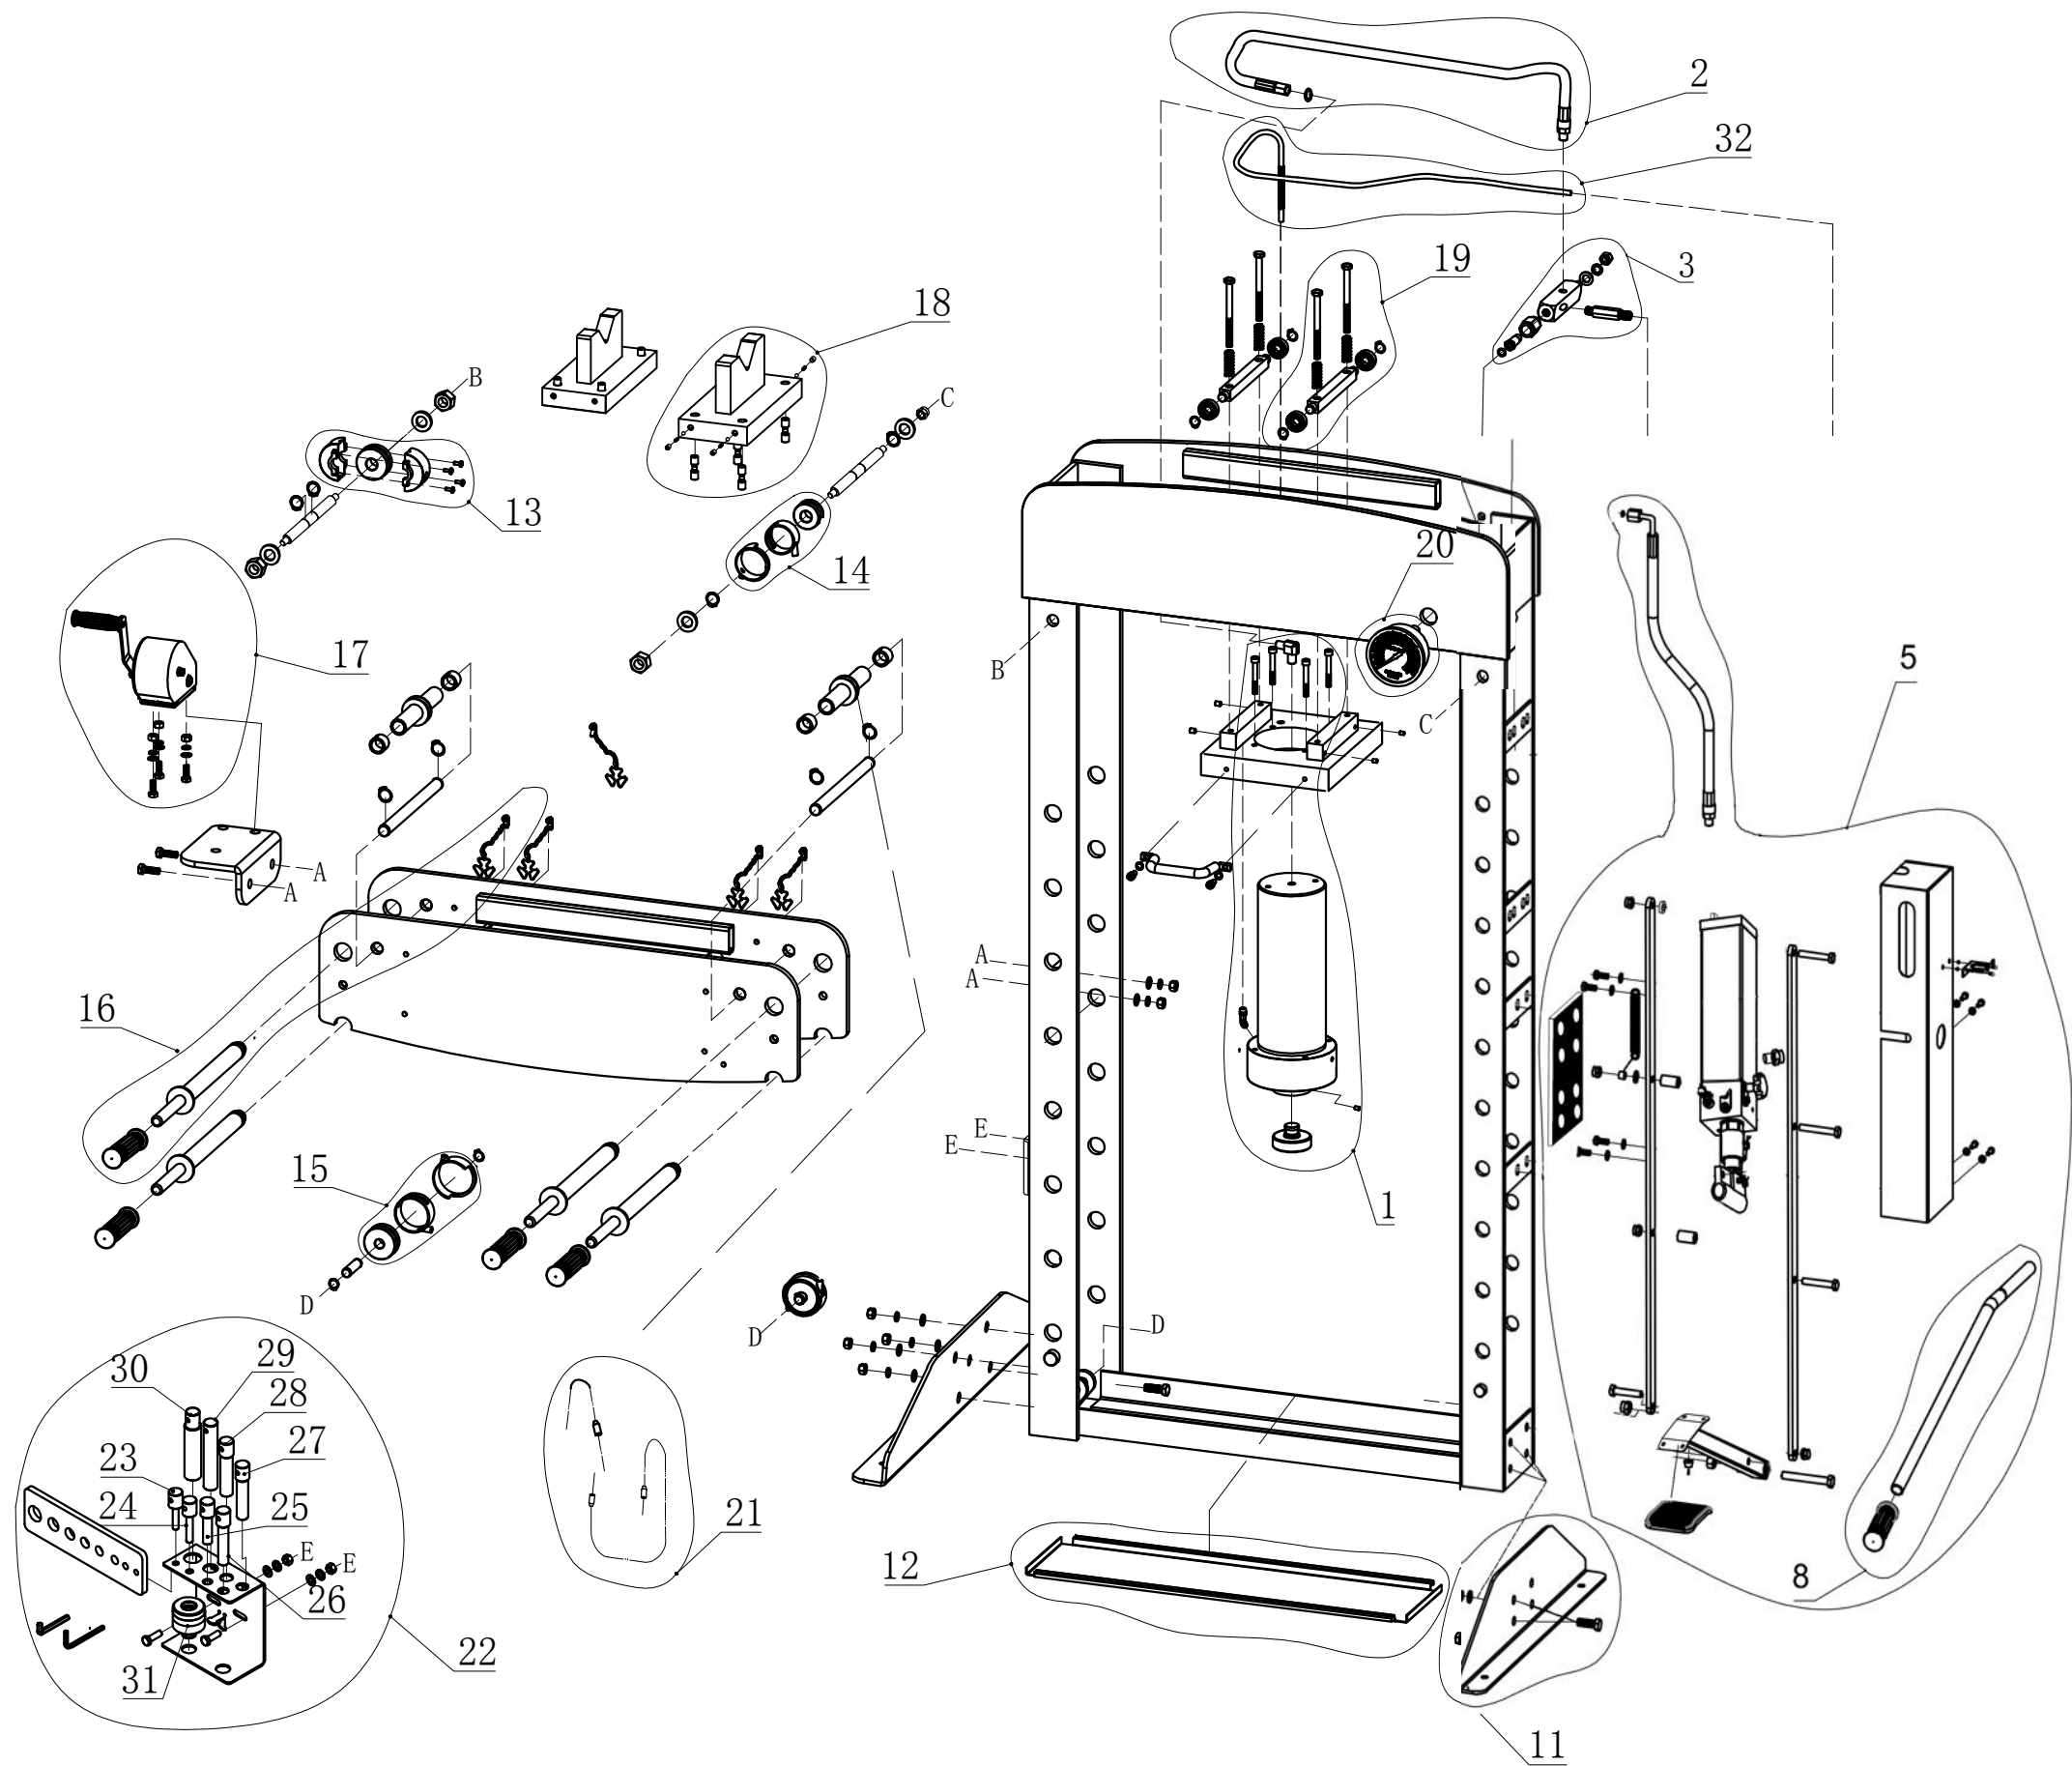

BH750

SNA Europe does not cover the causes over negligence in tool use and/or repair, inadequate care, or abnormal usage conditions. Follow the instructions for proper use, safety, maintenance and servicing given by SNA Europe.

Revision: 02